



GEN 2.4 LOCATION INDICATORS

2.4.1 Location indicators starting with nationality letter OM are used in accordance with the indicators published in ICAO Doc 7910. Alphanumerical indicators are for internal document reference only.

2.4.2 UAE Location indicators are summarised below.

Note: * Not on AFS

1. ENCODE		2. DECODE	
Location	Indicator	Indicator	Location
ABK	OMBK*	H095*	FALCON CITY OF WONDERS HELIPORT
ABU DHABI / AL BATEEN EXECUTIVE AIRPORT	OMAD	H129*	QASR AL SARAB DESERT RESORT HELIPORT
ABU DHABI / INTERNATIONAL	OMAA	H222*	TELAL RESORT HELIPORT
AL AIN / INTERNATIONAL	OMAL	OMAA	ABU DHABI / INTERNATIONAL
AL DHAFRA (MIL)	OMAM	OMAB*	BUHASA
AI HAMRA (MIL)	OMAH*	OMAC*	ASAB
AL JAZEIRAH	OMRJ	OMAD	ABU DHABI / AL BATEEN EXECUTIVE AIRPORT
AL YASAT	OMAY*	OMAE	EMIRATES FIR
ARZANAH	OMAR*	OMAF*	FUTAYSI
ASAB	OMAC*	OMAG*	KIZAD
BUHASA	OMAB*	OMAH*	AI HAMRA (MIL)
DAS ISLAND	OMAS*	OMAJ*	JEBEL DHANA
DELMA	OMDL*	OMAL	AL AIN / INTERNATIONAL
DUBAI / AL MAKTOUM INTERNATIONAL	OMDW	OMAM	AL DHAFRA (MIL)
DUBAI / INTERNATIONAL	OMDB	OMAQ*	QARNAYN
DUBAI MINHAD (MIL)	OMDM	OMAR*	ARZANAH
EMIRATES FIR	OMAE	OMAS*	DAS ISLAND
FALCON CITY OF WONDERS HELIPORT	H095*	OMAW*	SWEIHAN (MIL)
FUJAIRAH / INTERNATIONAL	OMFJ	OMAY*	AL YASAT
FUTAYSI	OMAF*	OMAZ*	ZIRKU
JEBEL DHANA	OMAJ*	OMBK*	ABK
KIZAD	OMAG*	OMBY*	SIR BANI YAS AIRPORT
LIWA (MIL)	OMLW*	OMDB	DUBAI / INTERNATIONAL
QAFFAYA	OMQF*	OMDL*	DELMA
QARNAYN	OMAQ*	OMDM	DUBAI MINHAD (MIL)
QASR AL SARAB DESERT RESORT HELIPORT	H129*	OMDW	DUBAI / AL MAKTOUM INTERNATIONAL
QUSAIWERA	OMQS*	OMFJ	FUJAIRAH / INTERNATIONAL
RAS AL KHAIMAH / INTERNATIONAL	OMRK	OMLW*	LIWA (MIL)
SAS AL NAHKIL (MIL)	OMNK*	OMNK*	SAS AL NAHKIL (MIL)
SHARJAH / INTERNATIONAL	OMSJ	OMQF*	QAFFAYA
SIR ABU NAIR	OMSN*	OMQS*	QUSAIWERA
SIR BANI YAS AIRPORT	OMBY*	OMRJ	AL JAZEIRAH
SWEIHAN (MIL)	OMAW*	OMRK	RAS AL KHAIMAH / INTERNATIONAL
TELAL RESORT HELIPORT	H222*	OMSJ	SHARJAH / INTERNATIONAL
ZIRKU	OMAZ*	OMSN*	SIR ABU NAIR